NIVISS



NFLOOD STANDARD COWL 220-240V AC 50/60Hz

The Ground series was designed using modern simulation methods in order to obtain the highest product quality.

- based on CREE® LEDs
- IP67
- body and front of aluminum ADC12
- round front
- 5-year warranty
- **-** 5Ŵ




TECHNICAL DRAWINGS



Working temperature range	-20°C ÷ +55°C
IP protection class	IP67
Lifetime L80B10	≥ 60 000h
Impact resistance	IK10
Protection class	I
Connection	0.5m
Wiring	H07RN-F 3G1
Dimming	ON-OFF
Luminous flux tolerance	±10%
Angle of distribution	10°, 20°, 45°



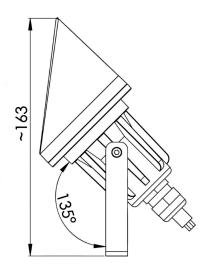

I



NFLOOD STANDARD COWL 220-240V AC 50/60Hz

The Niviss outdoor LED lighting fixture can be used for

lighting many places and

objects such as:


 exterior walls squares premises plants

parks gardens



ELECTRICAL INSTALLATION

Connecting to the power supply should be done when the power supply is off.

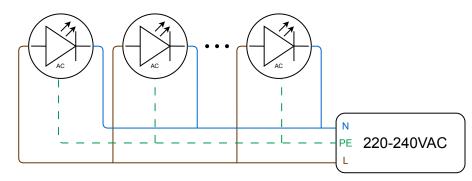

ORDER CODE AND TECHNICAL SPECIFICATIONS OF VARIANTS

VARIANT CODES IN THE TABLE BELOW TECHNICAL SPECIFICATIONS OF VARIANTS IN DATASHEET OF VARIANT

GENERAL TERMS OF USE

- Before using a luminaire, make sure what voltage range it is designed to.
- Connecting to the power supply should be done when the power supply is off.
- Use appropriate sockets and plugs: Ensure that your electrical sockets and plugs are compatible with the lamp's voltage and plug type.
- Use appropriate wiring for luminaires.
- Avoid overloading electrical circuits by not connecting too many lamps to a single outlet or circuit. Check the condition of the power cord and plug for any signs of damage or wear.
- Pay attention to the correct polarity when connecting the luminaires. Incorrect polarity may prevent the luminaires from functioning properly or could potentially damage them.
- Installation of the luminaires should be done by qualified person.
- Keep your luminaires clean and free from dust and debris, as it can affect their performance.
- Follow the luminaire connection diagram above.
- Avoid direct exposure of bright light sources to your eyes. Position luminaires in a way that minimizes direct glare or uncomfortable brightness.
- Ensure that the luminaire is placed on a stable surface and kept away from flammable materials. Allow sufficient clearance around the luminaire to prevent overheating. Keep away from fire.
- Make sure your electrical installations are properly grounded and meet the necessary safety standards. Avoid overloading circuits by not connecting too many lamps to a single outlet or circuit.
- Pay attention on correct connection of Line and Neutral to electric network.

ENVIRONMENTAL CAUTION!

base materials and then recycled. For more information regarding waste management please contact your local authorities, waste-management service or the seller of electrical and





ORDER CODE AND TECHNICAL SPECIFICATIONS OF VARIANTS

Index	[DEG]	[K]	Lumen Output [lm]	CRI/RA	[W]	Power supply type	Body material	Front material	Front shape
NFLOOD-STANDARD-PRC-5-VW-10-RD-AA-HV- COB-R	10	2700	500	≥80	5	220-240V AC 50/60Hz	Alu	Alu	\bigcirc
NFLOOD-STANDARD-PRC-5-VW-20-RD-AA-HV- COB-R	20	2700	500	≥80	5	220-240V AC 50/60Hz	Alu	Alu	0
NFLOOD-STANDARD-PRC-5-WW-10-RD-AA-HV- COB-R	10	3000	540	≥80	5	220-240V AC 50/60Hz	Alu	Alu	0
NFLOOD-STANDARD-PRC-5-WW-20-RD-AA-HV- COB-R	20	3000	540	≥80	5	220-240V AC 50/60Hz	Alu	Alu	0
NFLOOD-STANDARD-PRC-5-NW-10-RD-AA-HV- COB-R	10	4000	580	≥80	5	220-240V AC 50/60Hz	Alu	Alu	0
NFLOOD-STANDARD-PRC-5-NW-20-RD-AA-HV- COB-R	20	4000	580	≥80	5	220-240V AC 50/60Hz	Alu	Alu	\bigcirc
NFLOOD-STANDARD-PRC-5-CW-10-RD-AA-HV- COB-R	10	5000	620	≥80	5	220-240V AC 50/60Hz	Alu	Alu	\bigcirc
NFLOOD-STANDARD-PRC-5-CW-20-RD-AA-HV- COB-R	20	5000	620	≥80	5	220-240V AC 50/60Hz	Alu	Alu	\bigcirc